En Wi-Fi Connections (iOS)

Read this guide for information on using SnapBridge 360/170 for Wi-Fi connections on iOS devices.

The Wi-Fi Prompt

A Wi-Fi prompt will be displayed when SnapBridge 360/170 requires a Wi-Fi connection. Follow the steps below to connect to the camera via Wi-Fi.

1 Tap **Go** when prompted.

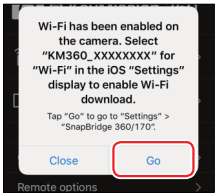
Wi-Fi has been enabled on the camera. Select "KM360_XXXXXXXX" for "Wi-Fi" in the iOS "Settings" display to enable Wi-Fi download.
Tap "Go" to go to "Settings" > "SnapBridge 360/170".
Close
Go
Remote options

2 Tap **< Settings** to display iOS settings.

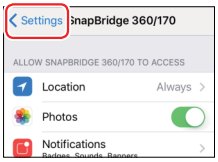

3 Tap **Wi-Fi**.

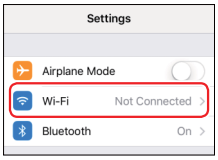

4 Tap **KM360_XXXXXXXX**.

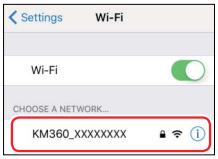

5 Enter the camera password if prompted (the default password is "NikonKeyMission").

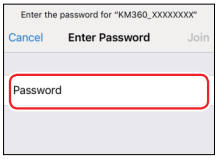

SnapBridge 360/170 will display a Wi-Fi icon in "Paired Cameras" once a Wi-Fi connection is established.

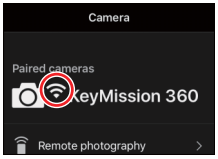

☑ Changing the Default Password

We recommend that you change the default password to protect your privacy. The password can be changed using the **Camera settings** > **Network menu** > **Wi-Fi** > **Network settings** option in the SnapBridge 360/170 **Camera** tab.

Why Is the Wi-Fi Prompt Displayed?

The Wi-Fi prompt is displayed when:

- **SnapBridge 360/170 switches from Bluetooth to Wi-Fi.** SnapBridge 360/170 automatically switches between Bluetooth and Wi-Fi to save power. The Wi-Fi prompt is displayed when SnapBridge 360/170 switches from Bluetooth to Wi-Fi. Note that SnapBridge 360/170 may need a few seconds to switch to Wi-Fi after you perform such operations as selecting remote photography in the **Camera** tab.
- **SnapBridge 360/170 detects the camera after losing the Wi-Fi connection.** The connection will be lost when your iOS device locks or the camera enters sleep mode, in which case your device may automatically connect to another network. The Wi-Fi prompt will be displayed as needed when SnapBridge 360/170 detects the camera again. The Wi-Fi connection may also be lost due to strong interference or as a result of exiting the SnapBridge 360/170 **Camera** tab.

Connection Issues

If you are unable to use remote photography or download selected images even after pairing the camera with the iOS device and establishing a Wi-Fi connection, try:

- switching tabs in SnapBridge 360/170,
- quitting and restarting SnapBridge 360/170, or
- ending pairing, telling your device to "forget" the camera, and then pairing with the camera again

Re-establishing Pairing

Follow the steps below to end and re-establish paring.

1 Open the **Connect** tab, select **Connection options**, and tap **End pairing**. After ending pairing, quit the app completely by double-clicking the Home button and swiping up to dismiss SnapBridge 360/170.

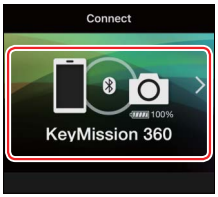

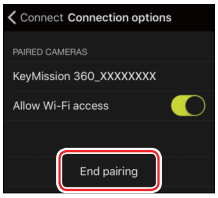

2 Open the iOS settings app and tap **Bluetooth**.

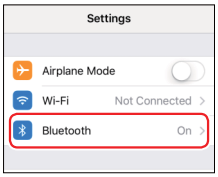

3 Tap the ⓘ icon to the right of the camera name.

4 Tap **Forget This Device**.

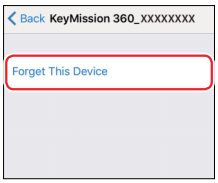

5 Start SnapBridge 360/170 and tap **Connect options** in the **Connect** tab.

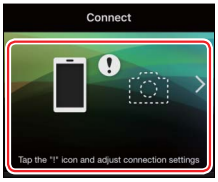

6 After confirming that the camera is off, press and hold the movie button for about seven seconds to initiate pairing.

7 Tap the camera name.

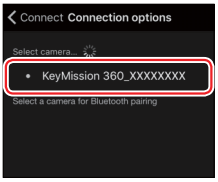

8 When prompted to select an accessory, wait for the Bluetooth icon at the top right corner of the display to turn from white to gray and then tap the camera name.

Wait until icon turns gray.

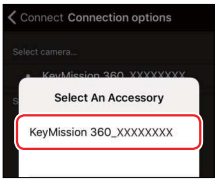

Tap camera name.

The dialog at right will be displayed when pairing is complete.